

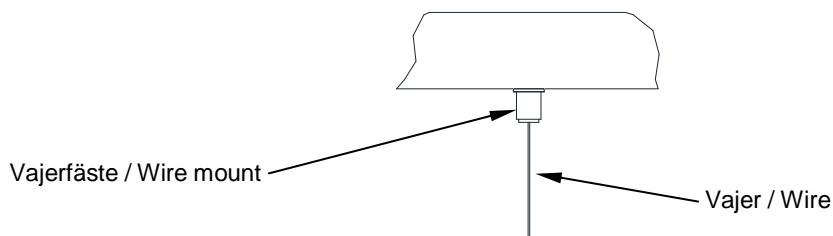


**Shibuya art nr: 82181 / 82191 / 82211**  
Installationsanvisning/Assembly instruction

1. Försäkra er om att spänning och frekvens på armaturen och nätet överensstämmer.  
*Ensure that voltage and Hz on the fixture and mains voltage are the same.*
2. Montera vajerfästen och vajer med samma c/c som armaturerna ska ha.  
*Attach the wire mounts and wires with the same c/c as the fixtures will have.*

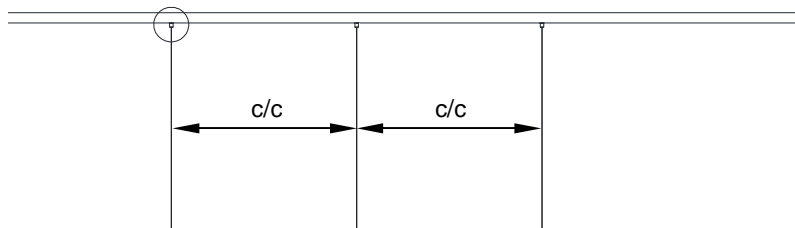

3. För in vajern i vajerlåset och justera höjden (finjustering sker sist). Var noga med att vajerlåset centreras på kabeln mellan armaturerna.  
*Insert the wire in the wire-lock and adjust the height (fine adjustment is later). Be sure to center the wire lock on the cable between the fixtures.*
4. Fäst upphängningsbygeln och avslutningsvajer på lämplig plats i tak eller vägg. **VIKTIGT!** Se till att anslutningskabeln och vajer har samma vinkel som kabel mellan armaturfästen.  
*Attach the connection cable and wire in the ceiling or wall. **IMPORTANT!** Make sure that the connection cable and wire has the same angle as the cable between light fittings.*

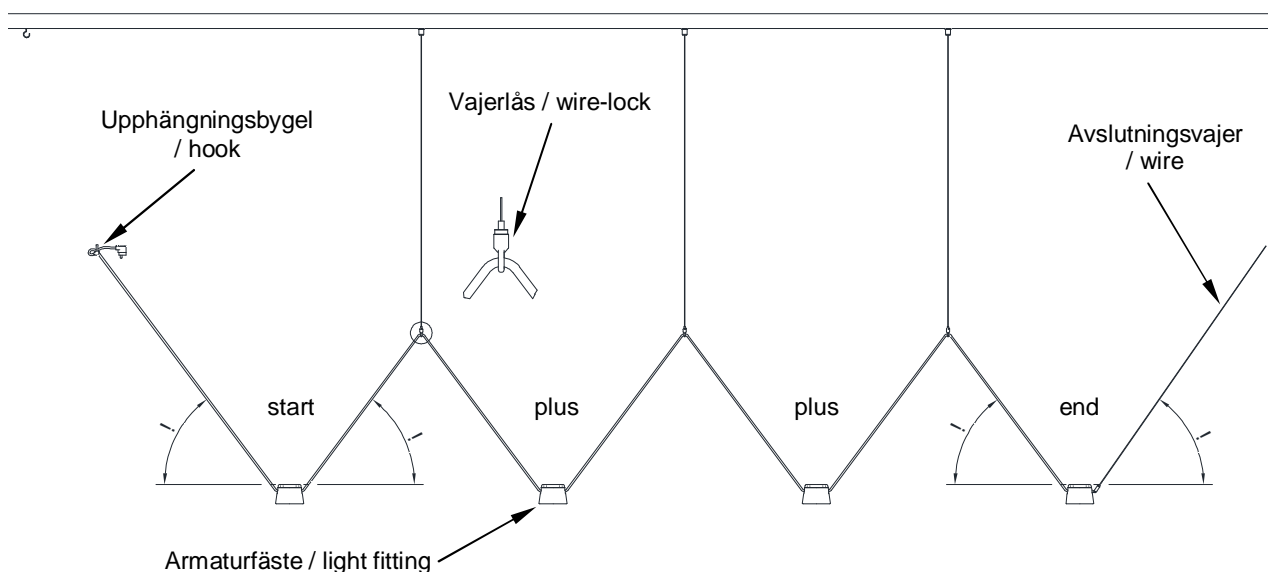



**Shibuya art nr: 82181 / 82191 / 82211**  
**Installationsanvisning/Assembly instruction**

5. Montera skärmar och tillbehör enligt nedan. Avsluta med att finjustera armaturernas placering.  
*Attach the lampshade and accessories as below. Finish by adjusting the luminaires placement.*

